


- SW WRITE P1.7
- SW PRG DWN P1.6
- SW PRG UP P1.5
- SW FOOTSW P1.4
- SW RED P1.3
- SW GREEN P1.2
- SW NOTES P1.1
- SW FOOTCTRL P1.0

- LED WRITE P4.4
- LED RED P4.3
- LED GREEN P4.2
- LED NOTES P4.1
- LED FOOTSW P4.0

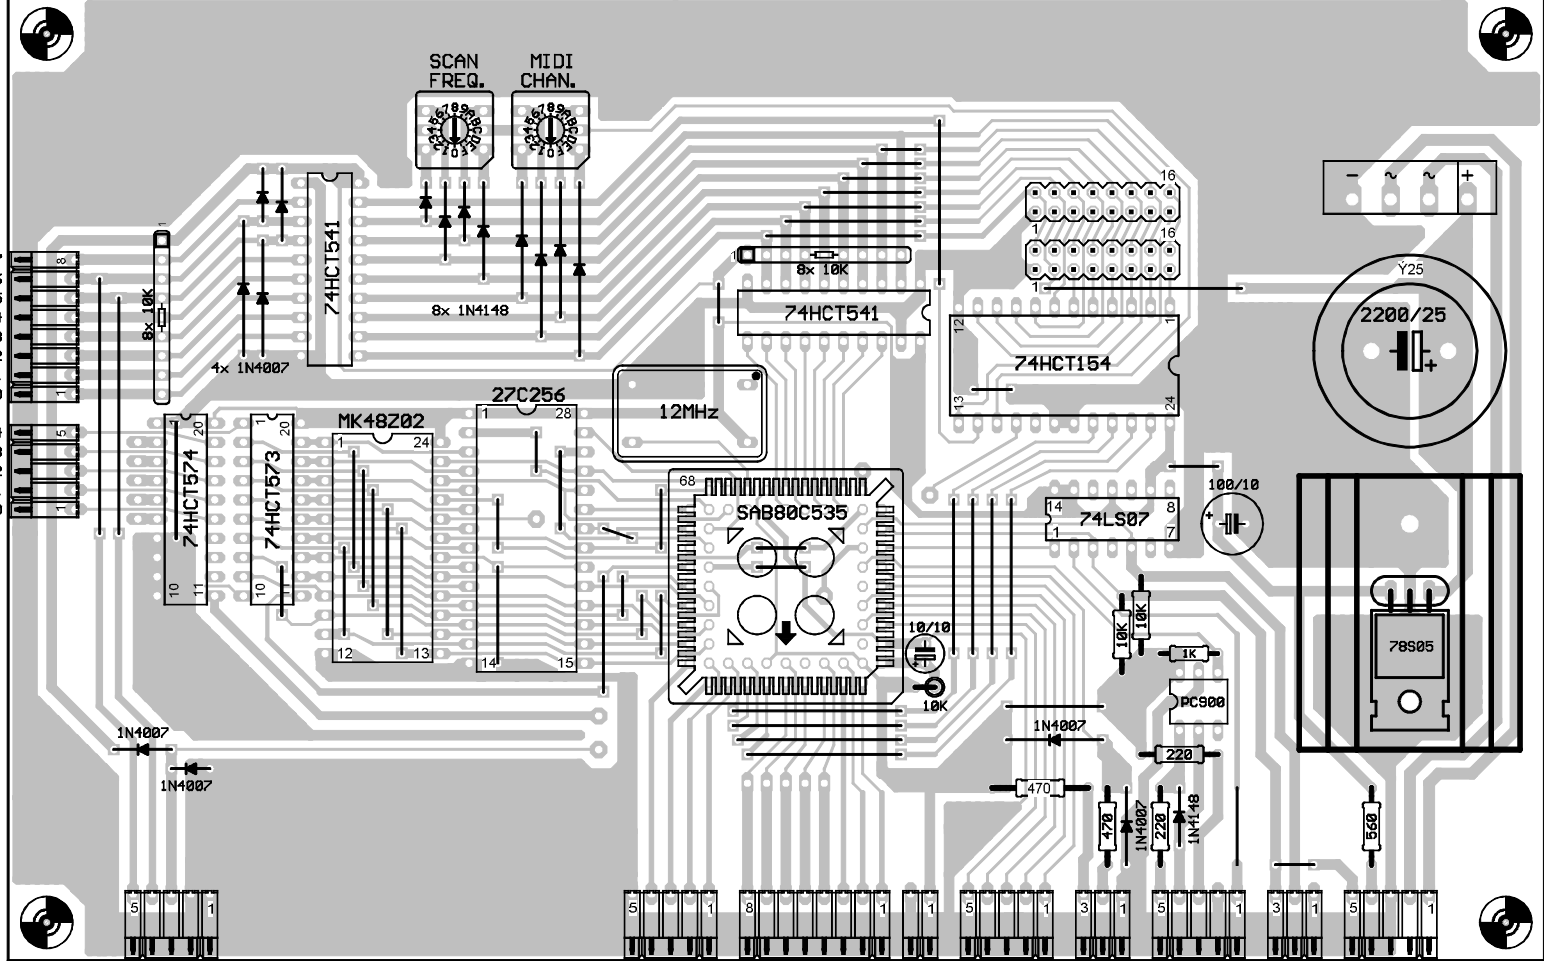

- FS PRG DWN
- FS PRG UP
- FOOTSW
- GND
- GND

- P5.7
- P5.6
- P5.5
- P5.4

- P4.0
- P4.1
- P4.2
- P4.3
- P4.4
- P4.5
- P4.6
- P4.7
- GND
- +5V

- RANGE POT
- THRES POT
- MULT POT
- VEL POT
- VELOC POT
- +5V
- CTRL
- GND
- MIDI IN
- MIDI IN
- MIDI OUT
- MIDI OUT
- GND
- GND
- SW STBY P3.3
- SW TRSP PRG P3.4
- GND
- GND
- SSR P3.3
- +SSR
- GND
- AC
- AC

- P1.0
- P1.1
- P1.2
- P1.3
- P1.4
- P1.5
- P1.6
- P1.7

- GND
- Ubb
- G5
- G4
- G3
- G2
- G1
- G0

- P1.0
- P1.1
- P1.2
- P1.3
- P1.4
- P1.5
- P1.6
- P1.7

- GND
- Ubb
- G5
- G4
- G3
- G2
- G1
- G0

